Intermediate Dynamics
Simple Angular Motion

Simple Angular Velocity

The rigid body B shown in the diagram below rotates about the Z-axis. The XYZ reference frame is a fixed frame, while the xyz reference frame is fixed in (and rotates with) the body. The XYZ reference frame is represented by the unit vector set $R:(\underset{\sim}{i}, \underset{\sim}{j}, \underset{\sim}{k})$, and the xyz reference frame is represented by the unit vector set $B:(\underset{\sim}{e}_1, \underset{\sim}{e}_2, \underset{\sim}{k})$. Note that ***each*** unit vector ***set*** is a ***right-handed*** set, that is $\underset{\sim}{i} \times \underset{\sim}{j} = \underset{\sim}{k}$ and $\underset{\sim}{e}_1 \times \underset{\sim}{e}_2 = \underset{\sim}{k}$.

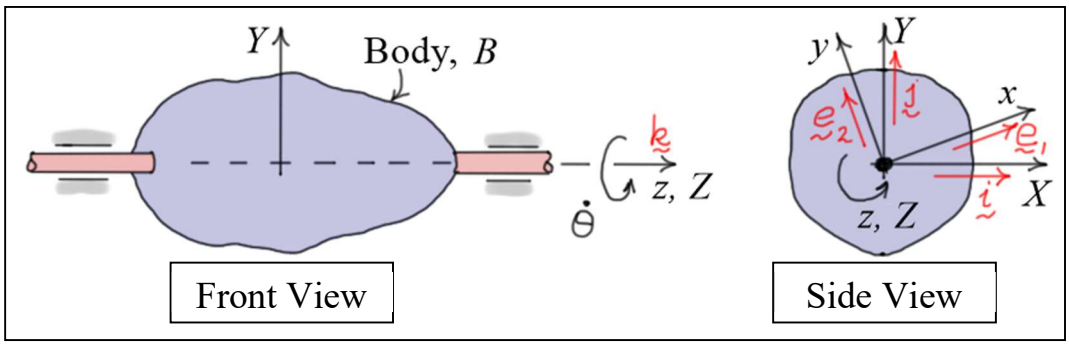

The unit vectors fixed in the body B can be ***differentiated*** by using the concept of ***angular velocity***. It can be shown that

$$\boxed{\frac{{}^R d\,\underset{\sim}{e}_i}{dt} = {}^R\underset{\sim}{\omega}_B \times \underset{\sim}{e}_i} \qquad (i = 1,2)$$

where $\frac{{}^R d\,\underset{\sim}{e}_i}{dt}$ represents the ***derivative*** of the unit vector $\underset{\sim}{e}_i$ in the ***reference frame*** R, and ${}^R\underset{\sim}{\omega}_B = \dot{\theta}\,\underset{\sim}{k}$ is the ***angular velocity*** of the body B in the ***reference frame*** R.

Aside:

$$\begin{aligned}
\frac{{}^R d\,\underset{\sim}{e}_1}{dt} &= \frac{{}^R d}{dt}(C_\theta \underset{\sim}{i} + S_\theta \underset{\sim}{j}) \\
&= \dot{\theta}(-S_\theta \underset{\sim}{i} + C_\theta \underset{\sim}{j}) \\
&= \dot{\theta}\,\underset{\sim}{e}_2 \\
&= \dot{\theta}(\underset{\sim}{k} \times \underset{\sim}{e}_1) \\
&= {}^R\underset{\sim}{\omega}_B \times \underset{\sim}{e}_1
\end{aligned}$$

Differentiation of Unit Vectors – General Case

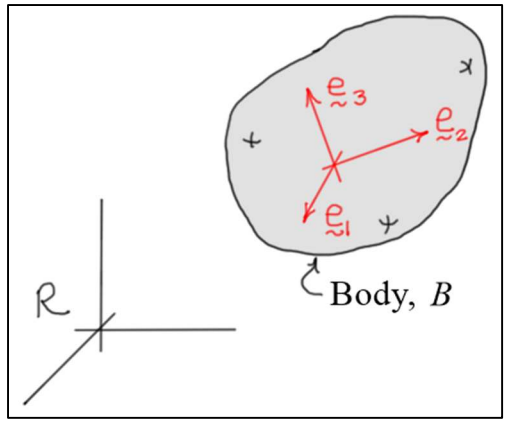

Consider now a rigid body B moving in three-dimensional space. In general, given a set of unit vectors $(\underset{\sim}{e}_1, \underset{\sim}{e}_2, \underset{\sim}{e}_3)$ fixed in B, it can be shown that

$$\boxed{\frac{{}^R d\underset{\sim}{e}_i}{dt} = {}^R\underset{\sim}{\omega}_B \times \underset{\sim}{e}_i} \qquad (i = 1,2,3)$$

where, as before, $\frac{{}^R d\underset{\sim}{e}_i}{dt}$ represents the derivative of the unit vector $\underset{\sim}{e}_i$ in the reference frame R, and ${}^R\underset{\sim}{\omega}_B$ is the angular velocity of the body B in the reference frame R. What is needed now is a means of calculating ${}^R\underset{\sim}{\omega}_B$, if the body doesn't have simple angular motion.

Simple Angular Acceleration

The angular acceleration of B in R is found by ***differentiating*** the angular velocity vector. That is,

$$\boxed{{}^R\underset{\sim}{\alpha}_B = \frac{{}^R d}{dt}({}^R\underset{\sim}{\omega}_B) = \ddot{\theta}\,\underset{\sim}{k}}$$

Kinematics of Fixed Axis Rotation

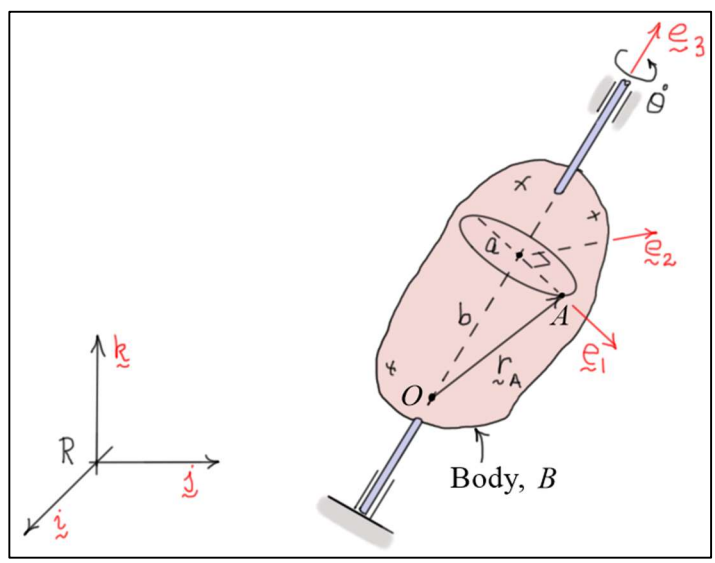

Consider the rigid body B shown in the diagram below. The fixed reference frame is represented by the unit vector set $R:(\underset{\sim}{i}, \underset{\sim}{j}, \underset{\sim}{k})$, and the rotating reference frame is represented by the unit vector set $B:(\underset{\sim}{e}_1, \underset{\sim}{e}_2, \underset{\sim}{e}_3)$. All points of B travel in a circular path around the fixed axis. The ***velocity*** and ***acceleration*** of any point within the body can be determined by differentiating (with respect to time) its position vector $\underset{\sim}{r}_A$ relative to any point on the fixed axis.

For example, the velocity of point A can be calculated as follows

$$
\begin{aligned}
\underset{\sim}{v}_A &= \frac{{}^R d}{dt}(a\underset{\sim}{e}_1 + b\underset{\sim}{e}_3) = a\frac{{}^R d\underset{\sim}{e}_1}{dt} + b\frac{{}^R d\underset{\sim}{e}_3}{dt} \\
&= a({}^R\underset{\sim}{\omega}_B \times \underset{\sim}{e}_1) + b({}^R\underset{\sim}{\omega}_B \times \underset{\sim}{e}_3) \\
&= {}^R\underset{\sim}{\omega}_B \times (a\underset{\sim}{e}_1 + b\underset{\sim}{e}_3) \\
&= {}^R\underset{\sim}{\omega}_B \times \underset{\sim}{r}_A
\end{aligned}
$$

Performing the cross product in the last equation gives $\boxed{\underset{\sim}{v}_A = a\dot{\theta}\underset{\sim}{e}_2}$. Note the velocity is ***tangent*** to the ***circular path***. Similarly, the acceleration of A can be calculated as follows

$$
\begin{aligned}
{}^R\underset{\sim}{a}_A &= \frac{{}^R d}{dt}({}^R\underset{\sim}{v}_A) = \frac{{}^R d}{dt}({}^R\underset{\sim}{\omega}_B \times \underset{\sim}{r}_A) \\
&= ({}^R\underset{\sim}{\alpha}_B \times \underset{\sim}{r}_A) + ({}^R\underset{\sim}{\omega}_B \times {}^R\underset{\sim}{v}_A)
\end{aligned}
$$

Performing the operations in this last equation gives $\boxed{{}^R\underset{\sim}{a}_A = -a\dot{\theta}^2\underset{\sim}{e}_1 + a\ddot{\theta}\underset{\sim}{e}_2}$. Note the acceleration has components both ***normal*** and ***tangent*** to the circular path.